


# TRAP GUARD WOOD FLOOR HUB/FLOOR DRAIN

CAN BE USED WITH OR WITHOUT GYPCRETE FLOORS

STRAINER W/ OPTIONAL 3/4" CPVC OPENING FOR CONDENSATE OR RELIEF VALVE DRAIN LINE

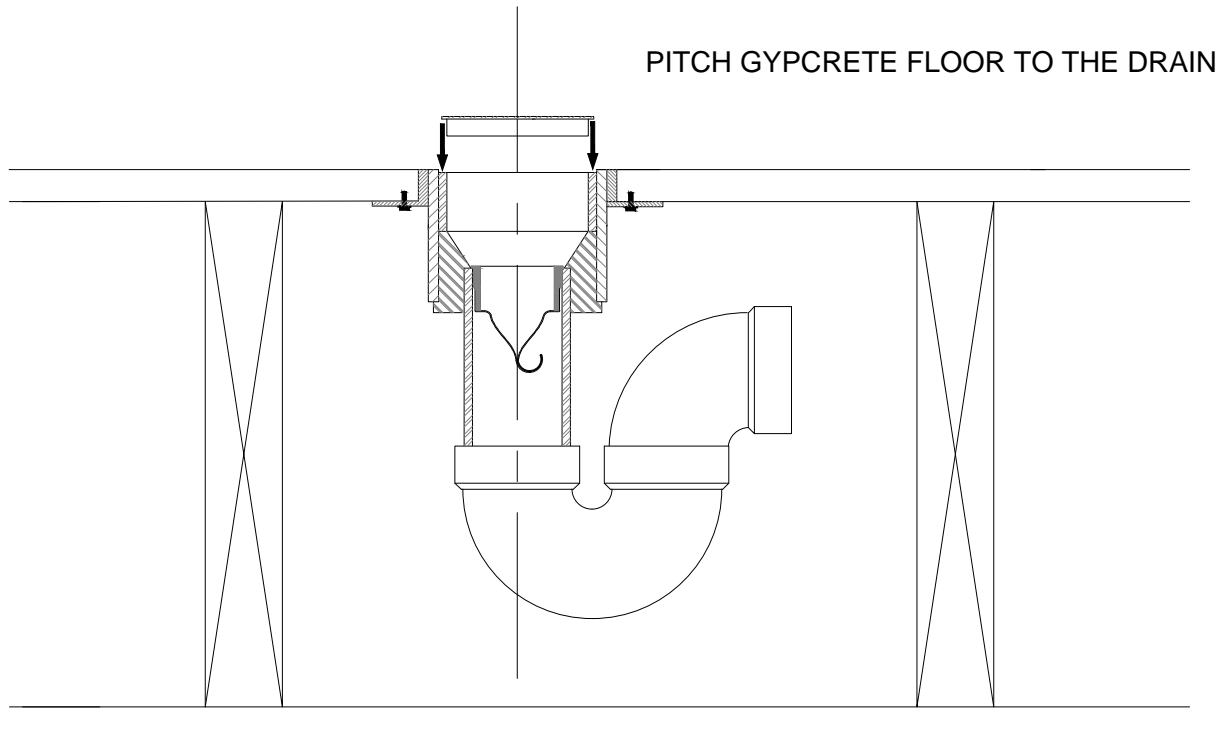

MOUNT FLANGE FROM THE TOP WITH GYPCRETE FROM THE BOTTOM WITHOUT USE T-3SO STRAINER WHEN DISCHARGING A RELIEF VALVE INTO THE HUB DRAIN

## IMPORTANT NOTES :

1. Drill a 4" hole through the wood floor at the desired location for the drain body insertion.
2. Use caulking under or on top of the mounting flange to waterproof the drain to the floor.
3. Secure the drain flange from the top side when gypcrete topping is used, from the bottom when not.
4. The drain can be used as a hub-drain and a floor drain using the optional chrome strainer with the 3/4" CPVC coupling mounting through the strainer for condensate or relief valve lines.

Part Number for the Hub Drain is: TG23FBHD or TG24FBHD

Part Number for the Hub Drain with recessed strainer is: TG23FBHDRS or TG24FBHDRS

Part Number for the Hub Drain with flush strainer is: TG23FBHDS or TG24FBHDS

Note: The above hub drain comes with a concrete protective cap. Can be ordered with a chrome strainer.

## MAINTENANCE INSTRUCTIONS

The Trap Guard should be inspected periodically for build up of any type debris.

The device should thoroughly with clear warm water.

Not to be used on waxed or grease-laden floors.



W.H. Directory Reference 99 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-06  
F Rating 1 & 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :

5-31-21

DRG . NO .

C-6331-EBTG