


Self Seal Connect to Sleeve Assembly

POURED CONCRETE ON WOOD FORM
FOR FLOORS

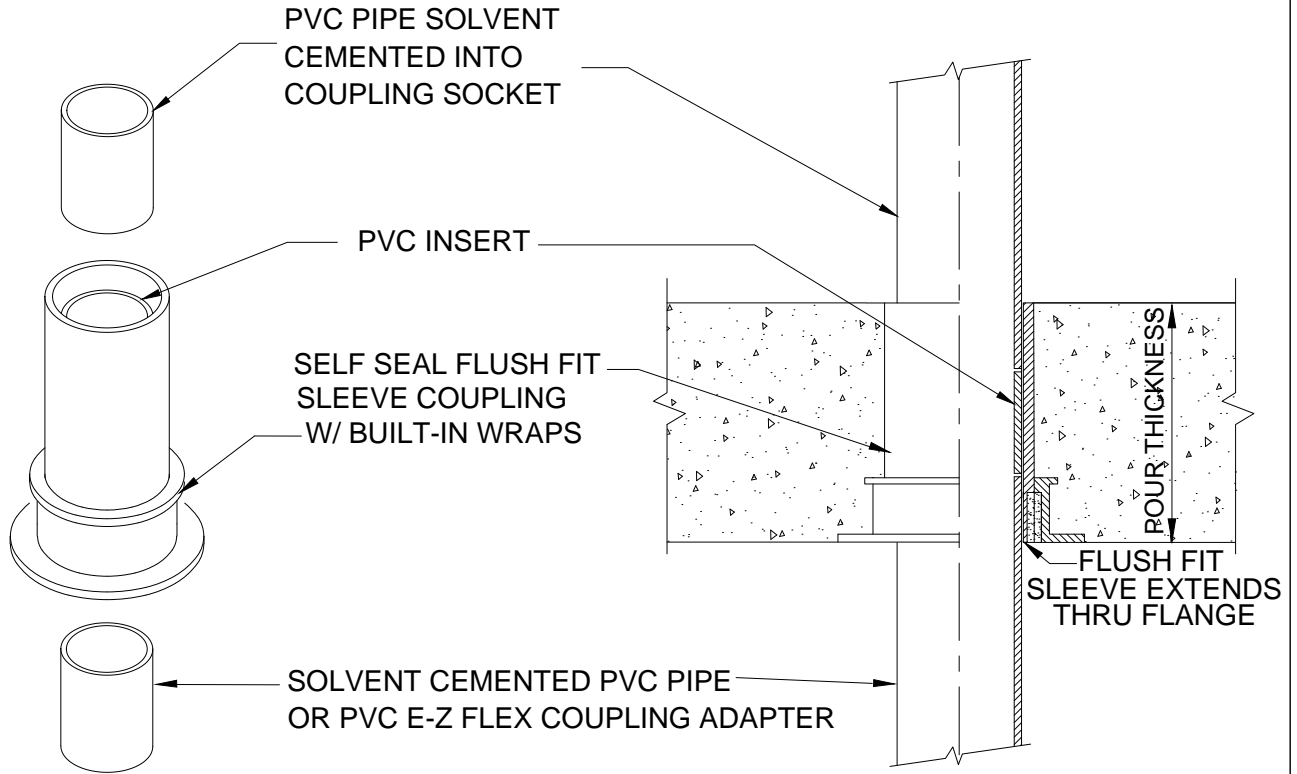

IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Solvent cement the PVC pipe or E-Z Flex Coupling into bottom or top socket.
4. E-Z Flex connections can be used for connecting prefab piping assemblies to the sleeve coupling. The EZ-Flex can be used to go from cast iron to plastic piping or connecting ProVent Stack Fittings.



W.H. Directory Reference 00 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21

DRG . NO .
C-9049-A48