


PROSEAL CLOSET ASSEMBLY

CONCRETE ON WOOD OR STEEL FORMS
FOR FLOORS

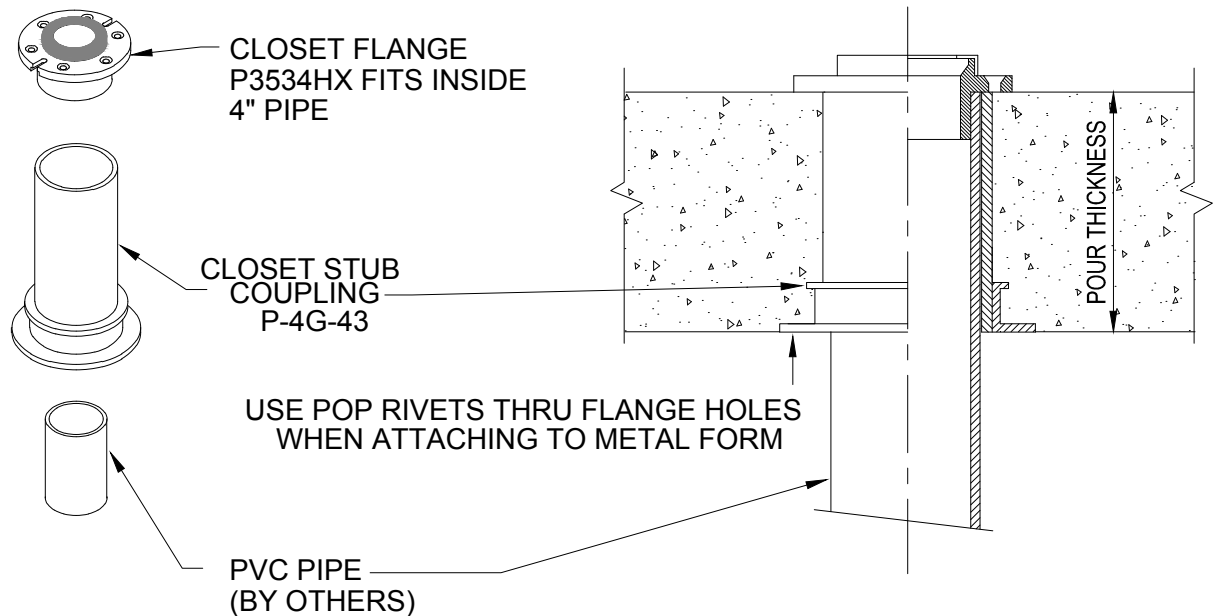

IMPORTANT NOTES :

1. Use nails through the flange holes to mount the 4" Closet Stub to the deck.
2. After the concrete pour, insert the 4" PVC pipe up inside the sleeve to the top of the sleeve.
3. Solvent cement the branch piping directly to the 4" pipe at the bottom of the closet stub.
4. Insert & solvent cement the P3534HX closet flange into the 4" pipe and set toilet.

* The new elastomeric seal on this flange has been tested to hold a 10 ft. head of water pressure.



W.H. Directory Reference 01 Edition
Firestop Device
W.H. Design No. PS/PH 120-15
F Rating 2 & 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
05-31-21
DRG . NO .
C-4402-A43