


# LAV OR SINK SLEEVE ASSEMBLY

CONCRETE ON WOOD FORMS FOR FLOORS

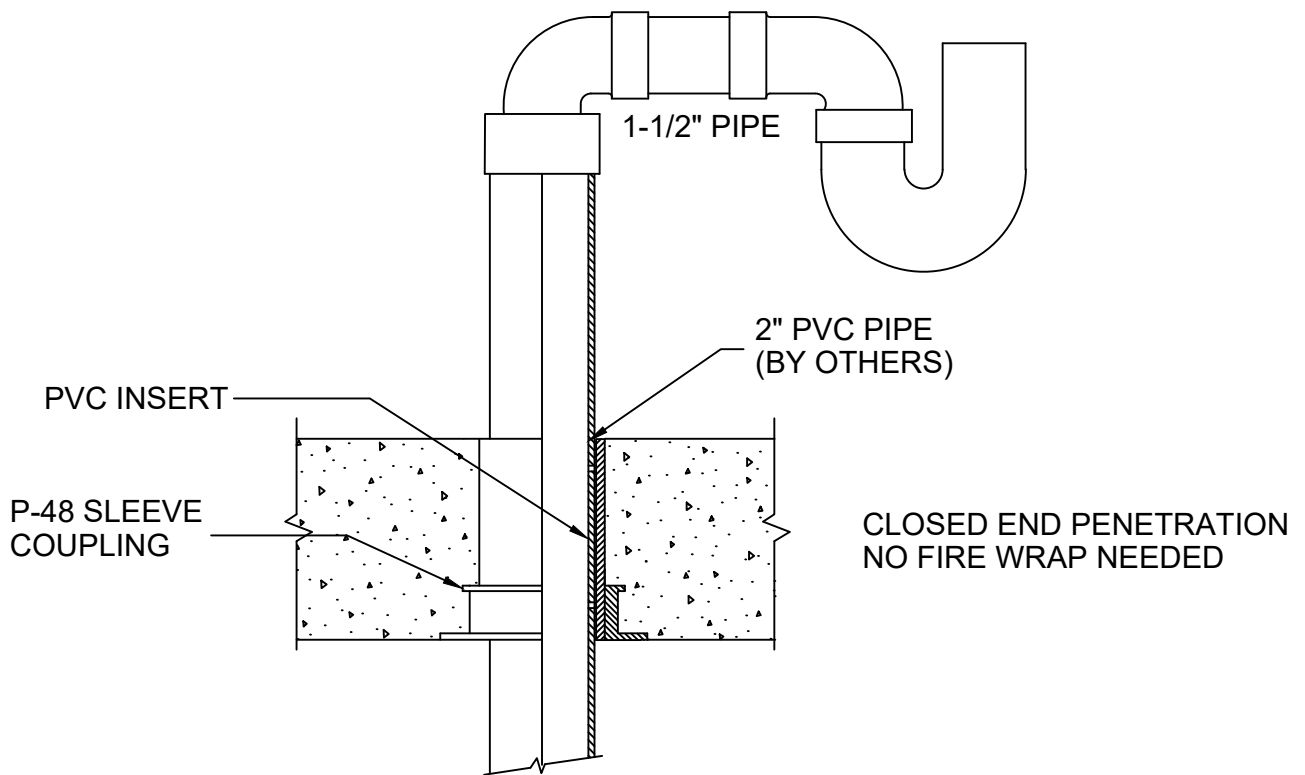

SEE DRAWING C-4805-C OR D FOR INSTALLATION  
IN CORRUGATED METAL OR EXISTING CONCRETE.

## IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Insert & solvent weld the 2" PVC pipe for lav or sink waste into the #48 Sleeve Coupling.
4. Solvent cement the PVC branch piping to the bottom socket of the #48 Sleeve Coupling to complete the penetration.



W.H. Directory Reference 97 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-08  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
05-31-2021  
DRG . NO .  
C-4805-A