


LAV OR SINK SLEEVE ASSEMBLY

FOR CORED HOLE THRU PRECAST OR EXISTING CONCRETE

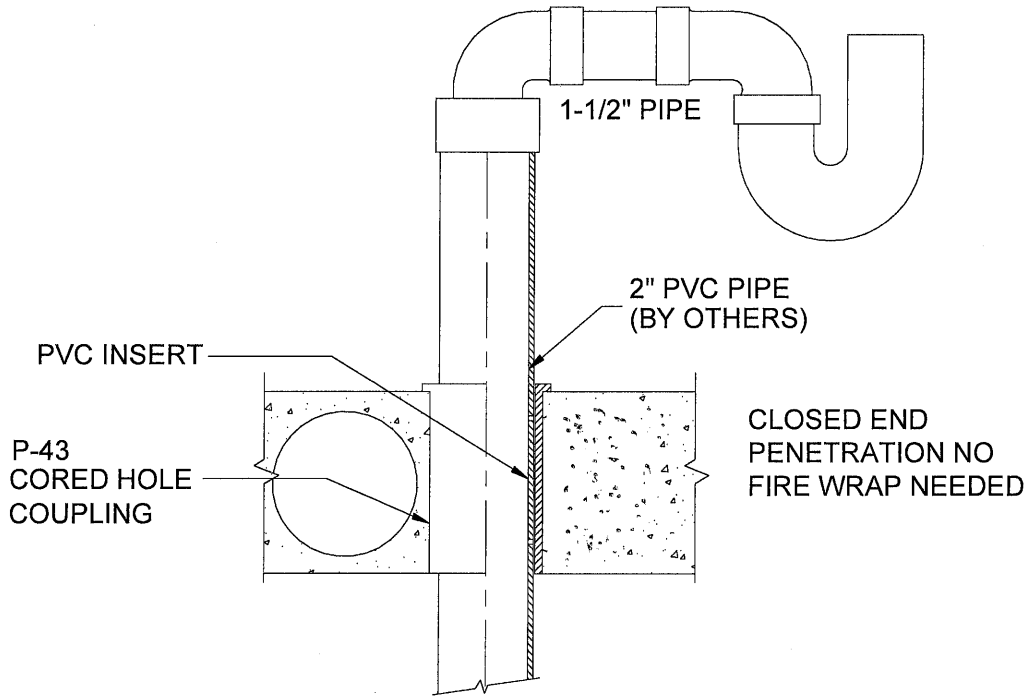

SEE DRAWING C-4805-A FOR CONCRETE ON A WOOD FORM

IMPORTANT NOTES :

1. Core a 2-3/4" hole to insert the ProSet # 43 firestop sleeve.
2. Insert & solvent weld the 2" PVC pipe for lav or sink waste into the #43 Sleeve Coupling.
3. Solvent cement the PVC branch piping to the PVC pipe at the bottom to complete the penetration as shown.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PH 120-08
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
05-31-21

DRG . NO .
C-4805-D