


SLEEVE ASSEMBLY FOR PRECAST SHOWER DRAIN

CONCRETE ON CORRUGATED METAL DECK
FOR FLOORS

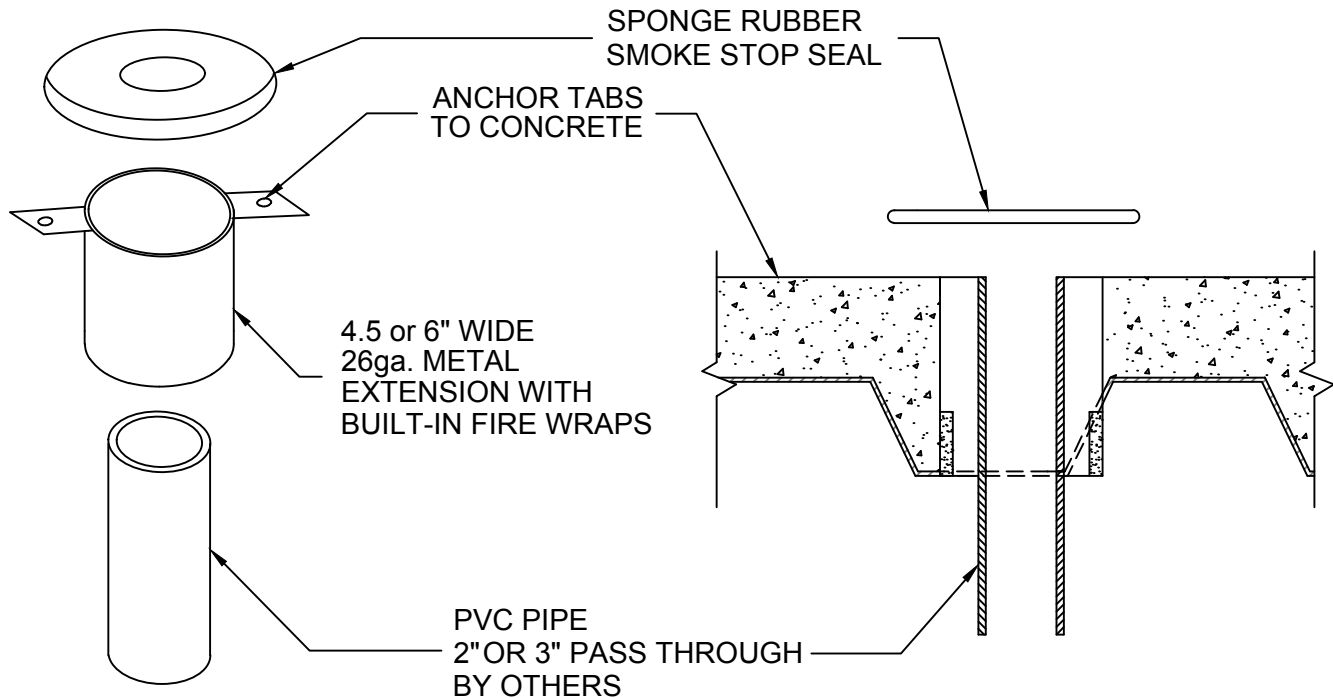

2" OR 3" PASS THROUGH PVC PIPE BY OTHERS THROUGH 4.5" or 6" OVERSIZE FIRESTOP

IMPORTANT NOTES :

1. Core a 4.5" hole or a 6" hole to make a larger opening that allows more space to set the shower floor.
2. Insert the metal can into cored hole and secure the metal tabs to the concrete floor.
3. Place the sponge rubber over the opening before inserting the 2" PVC drain from the precast shower.
4. Insert the pass through drain pipe through the metal can and connect to a P-Trap.

Alternate Method: Mineral Wool can be inserted from below to provide a smoke seal.



W.H. Directory Reference 08 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
05-31-21

DRG . NO .
C-6332-DPSC