


CORED HOLE CONNECT TO STACK ASSEMBLY

FOR HOLLOW CORE OR EXISTING CONCRETE FOR FLOORS

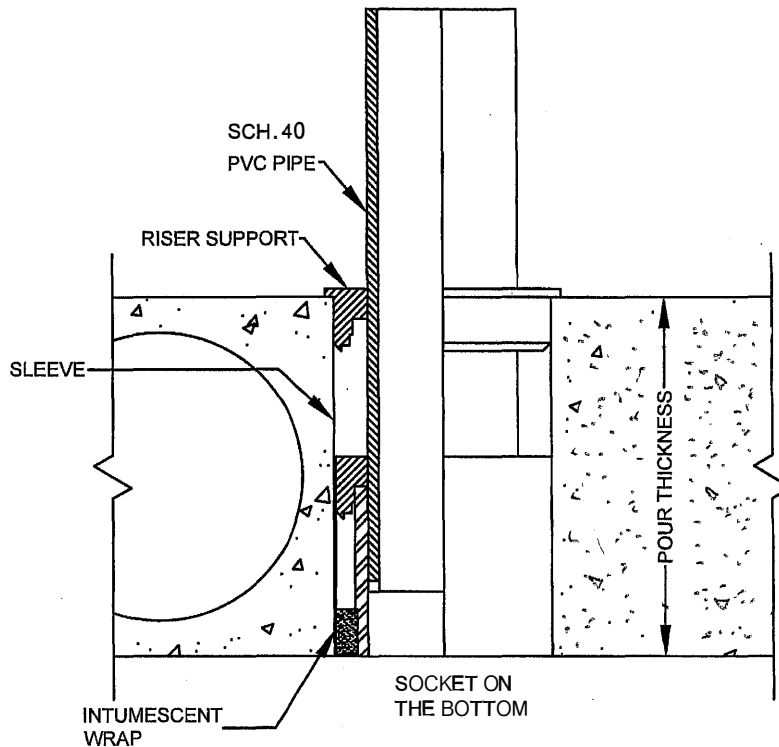

IMPORTANT NOTES:

1. Core a 3" hole for a 2" plastic pipe. A 4-1/2" hole for a 3" and a 6" hole for a 4" pipe.
2. Insert the Self Seal Cored Hole Coupling through the proper size cored hole, and adjust the riser support to the thickness of the slab so that the bottom of the sleeve is flush with the bottom of the slab.
3. A bead of caulk around the bottom of the Seal Ring can be used to waterproof and anchor the opening to the concrete floor if required.
4. Solvent cement the pipe into the cored hole sleeve fitting.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F & T Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR

DATE :
05-31-2021

DRG. NO.
C-9049-FF-CH