


Self Seal Flush Fit Stack Assembly

POUR CONCRETE ON WOOD FORM
FOR FLOORS

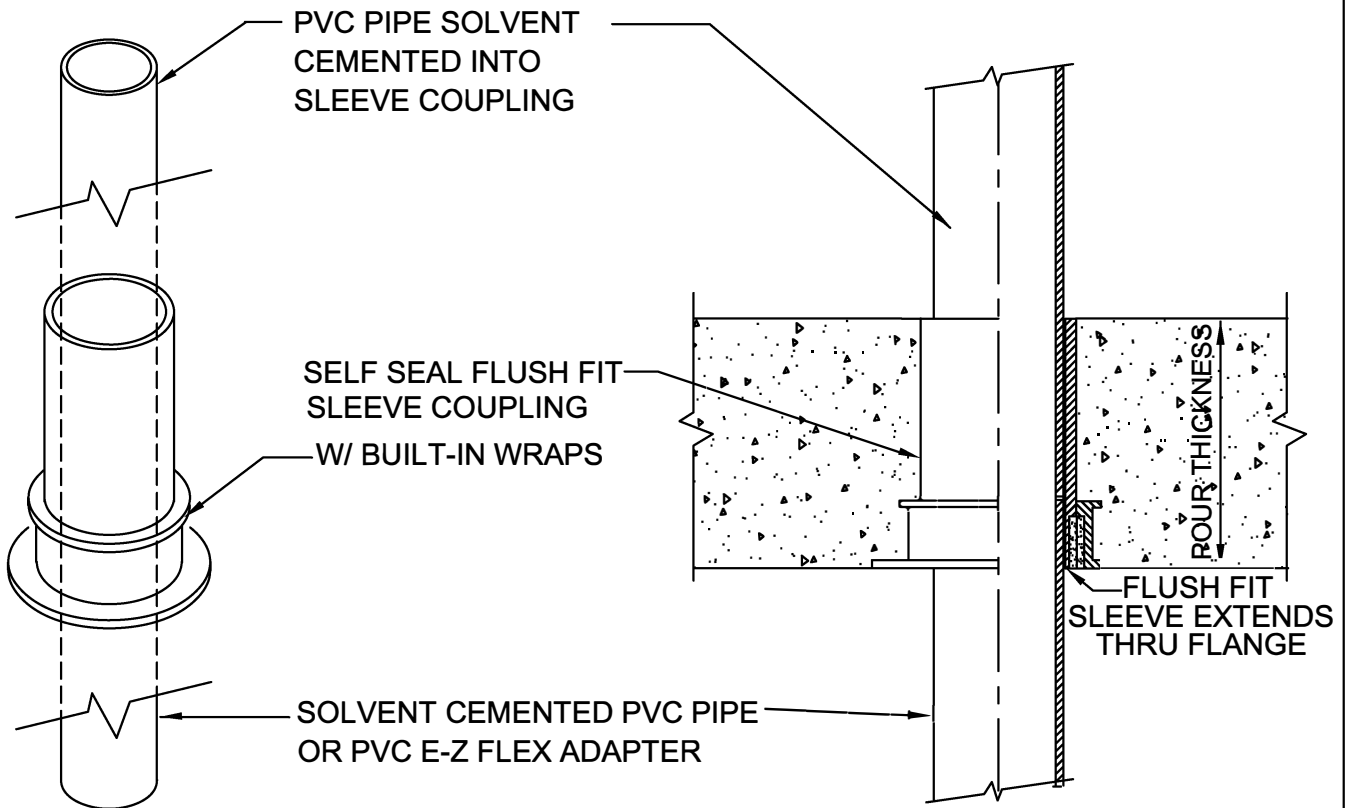

IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Solvent cement the PVC pipe or E-Z Flex Coupling into bottom and top socket.
4. E-Z Flex connections are usually used for connecting fab piping assemblies to the sleeve coupling
They are also used to adapt from cast iron to plastic piping or connecting ProVent Stack Fittings.



W.H. Directory Reference 00 Edition
Firestop Device
W.H. Design No. PS/PHV 180-03
F Rating 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
5-31-21
DRG . NO .
C-9049-AFF