


# CAST IN PLACE PENETRATION

FOR CABLE AND WIRE  
CONCRETE ON WOOD FORM  
FOR FLOORS OR WALLS

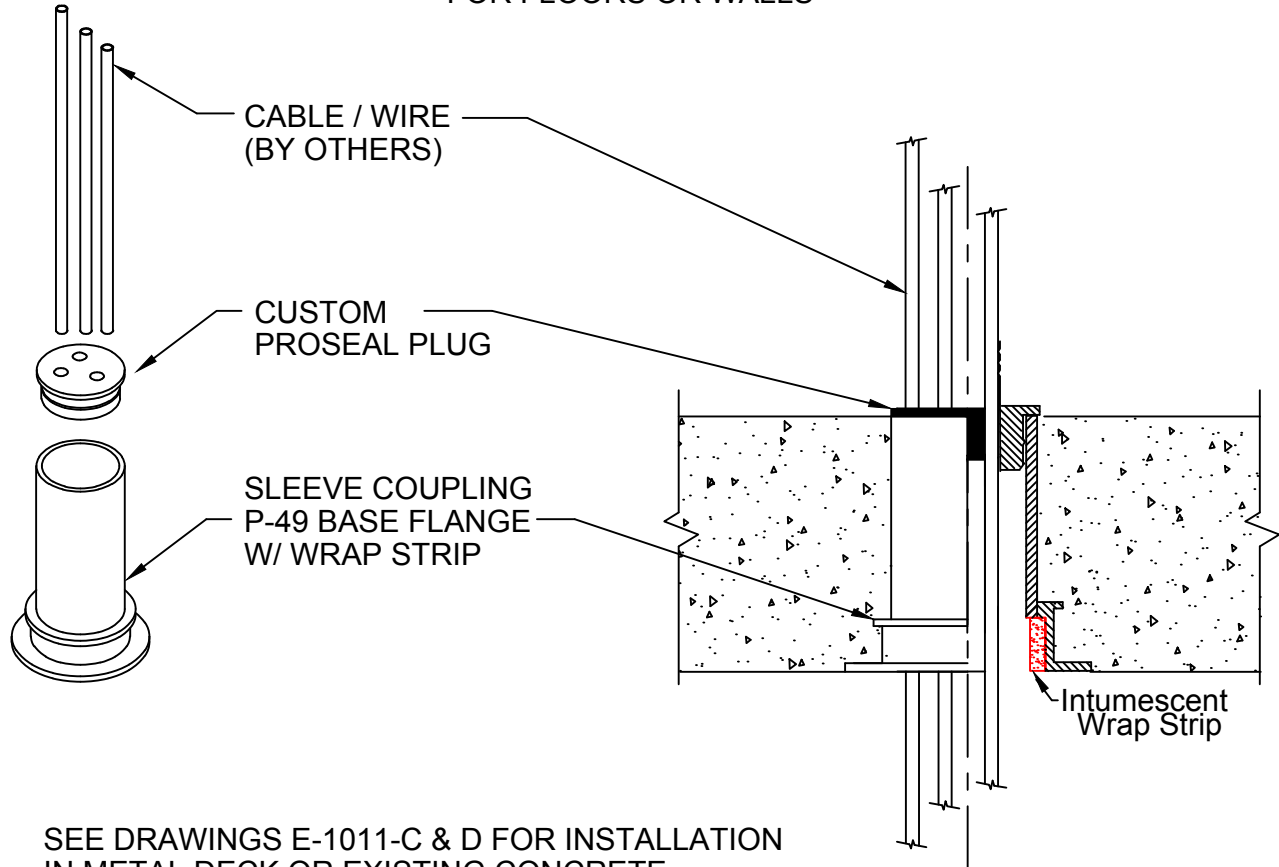

## IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Insert the cables or wire through the sleeve coupling.
4. Push the wire or cables into the proper size split holes in the ProSeal Plug at one end of the sleeve coupling.
5. Drive the ProSeal Plug into the sleeve with a hammer.

NOTE: Various custom multiple openings are available by drilling blank ProSeal Plugs.



W.H. Directory Reference 99 Edition  
Firestop Device  
W.H. Design No. PS/PH 180-04  
F Rating 3 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
12-10-19  
DRG. NO. :  
E-1003-A