


CAST IN PLACE PENETRATION

FOR ½" THROUGH 1½" PIPE
CONCRETE ON WOOD FORM
FOR FLOORS OR WALLS

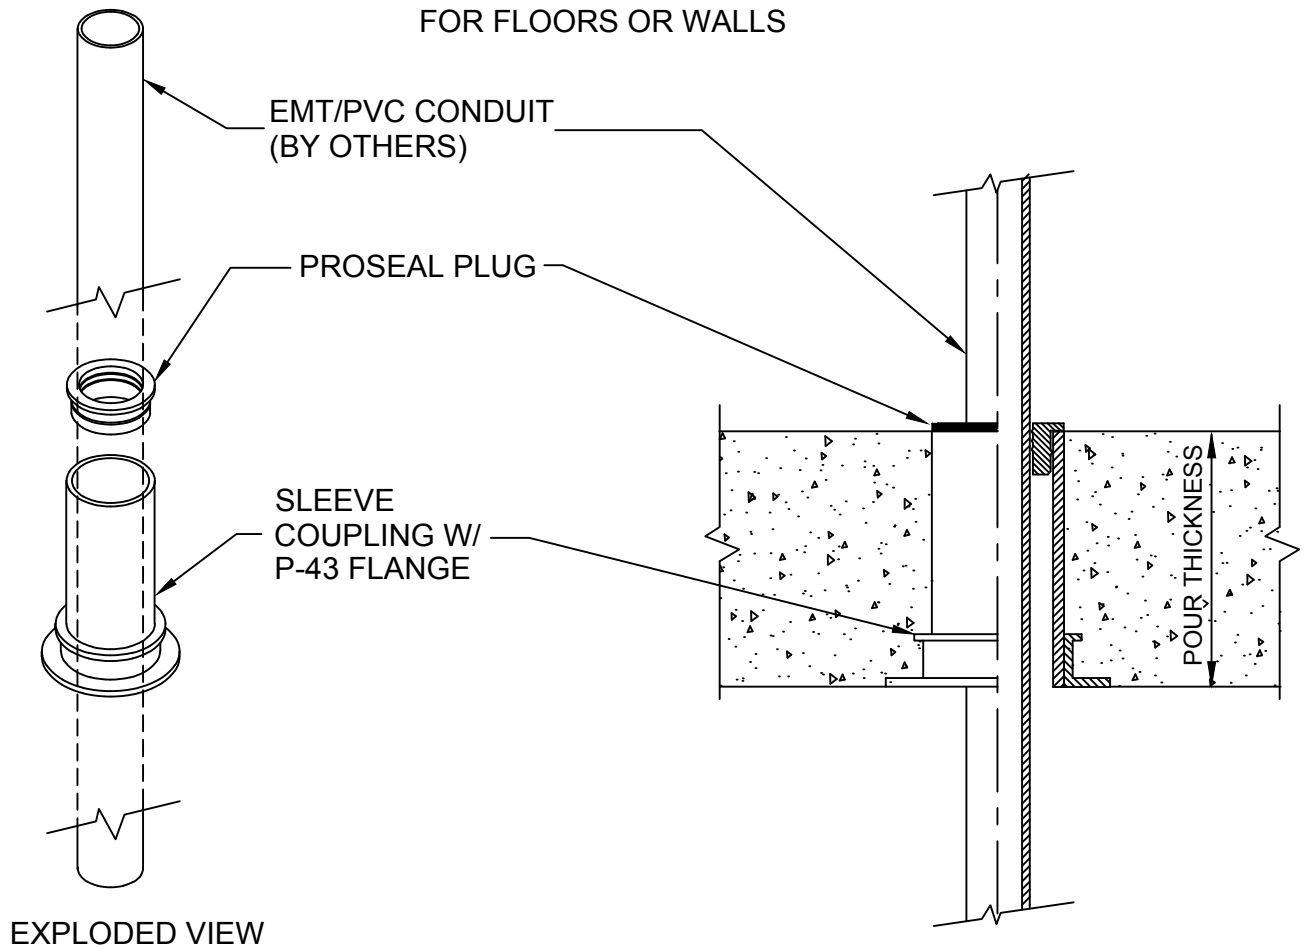

IMPORTANT NOTES :

1. Use nails through flange holes to mount the sleeve coupling to the deck.
2. After concrete is poured, remove protective cap.
3. Insert pass through piping up through the sleeve coupling.
4. Install the proper size split ProSeal Plug around the pipe & drive in from the top side.
5. Use two ProSeal plugs for wall installation. - See Dwg. No. E-1011-F & G.
6. UWhen ordering ProSeal plugs - Use suffix EMT or P for PVC.

Alternate : Plugs may be solvent cemented in for waterproofing and ease of installation.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 120-04
F Rating 2 Hrs.
ASTM E-814



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
12-10-19
DRG . NO .
E-1011-A