


CAST IN PLACE PENETRATION

CONCRETE ON CORRUGATED METAL DECK
FOR FLOORS

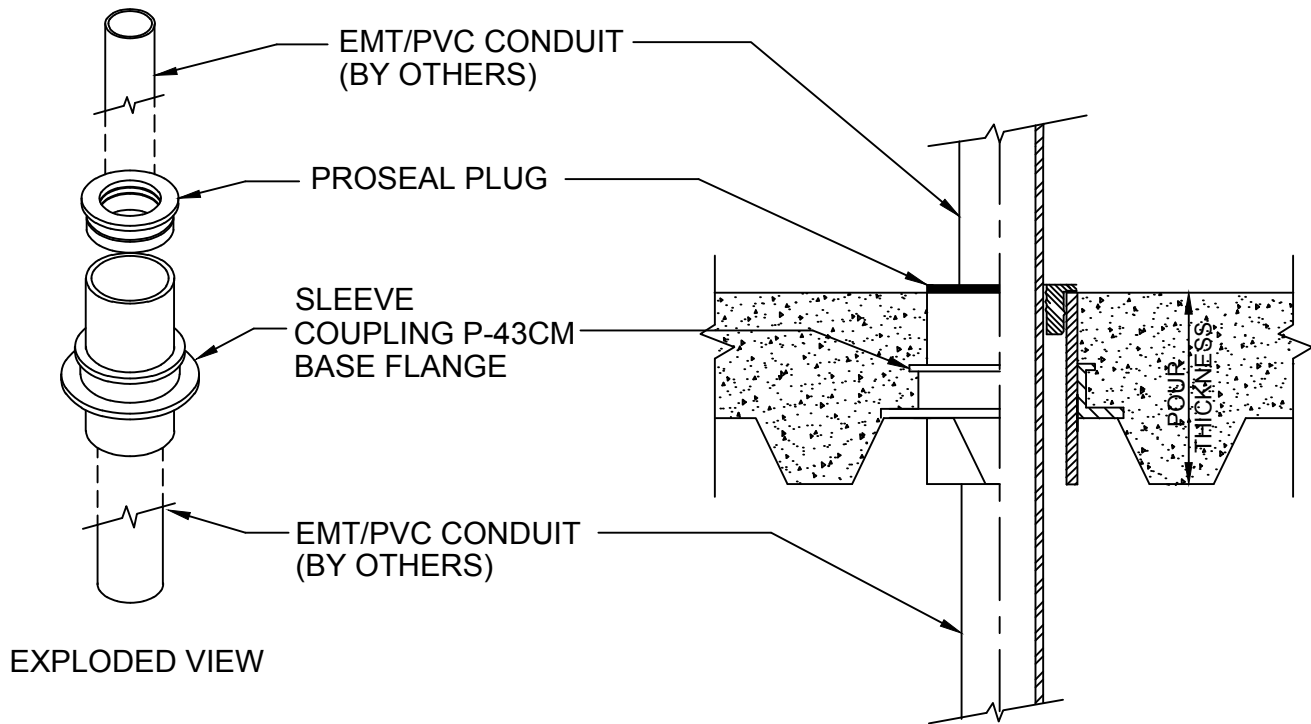

IMPORTANT NOTES :

1. Cut hole through the deck to accommodate the sleeve coupling to the bottom of corrugation.
2. Mount sleeve to the corrugated metal with sheet metal screws, if necessary use a right angle metal strip to span the corrugations. See component drawing P-43CM.
3. After concrete is poured, remove protective cap.
4. Insert the pass through piping up through the sleeve coupling.
5. Install the proper size split ProSeal Plug around the pipe & drive in from top side.
6. When ordering ProSeal Plugs - use suffix EMT or P for PVC.



W.H. Directory Reference 97 Edition
Firestop Device
W.H. Design No. PS/PHV 120-04
F Rating 2 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
12-11-19
DRG . NO .
E-1011-C