


CAST IN PLACE PENETRATION

FOR 2" PIPE AND LARGER
CONCRETE ON WOOD FORM
FOR FLOORS OR WALLS

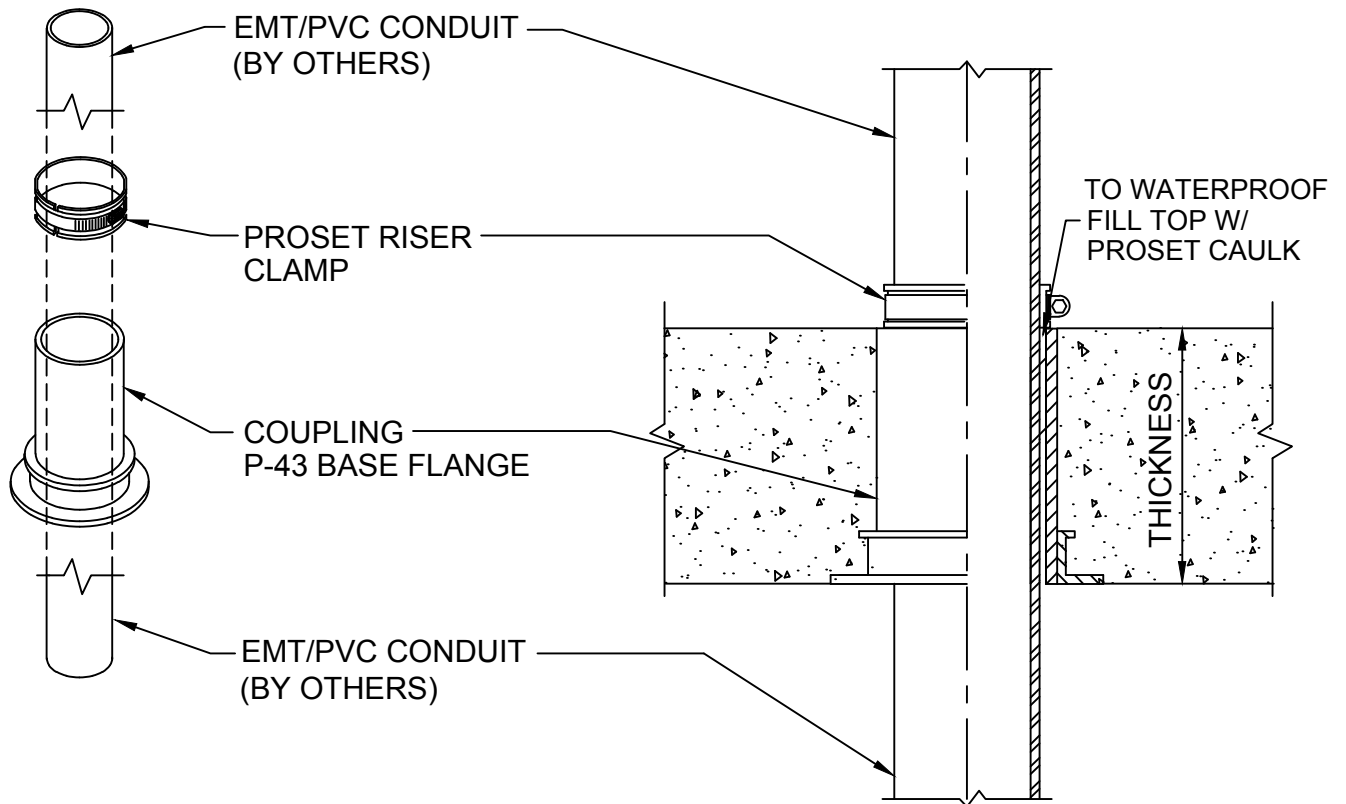

IMPORTANT NOTES :

1. Use nails through flange holes to mount the coupling to deck.
2. After the concrete pour, remove protective cap.
3. Insert the pipe through the coupling.
4. Fill void at top with ProSet caulking to waterproof.
5. Install riser clamp around pipe to support and draft stop. Clamp on both sides for walls.
6. When ordering riser clamp - Use suffix EMT or P for PVC.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PHV 120-05
F Rating 2 Hrs.
ASTM E-814



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR™

DATE :
12-10-19
DRG . NO .
E-1014-A