


PROSEAL CLOSET ASSEMBLY

PRECAST CONCRETE OR EXISTING CONCRETE FOR FLOORS

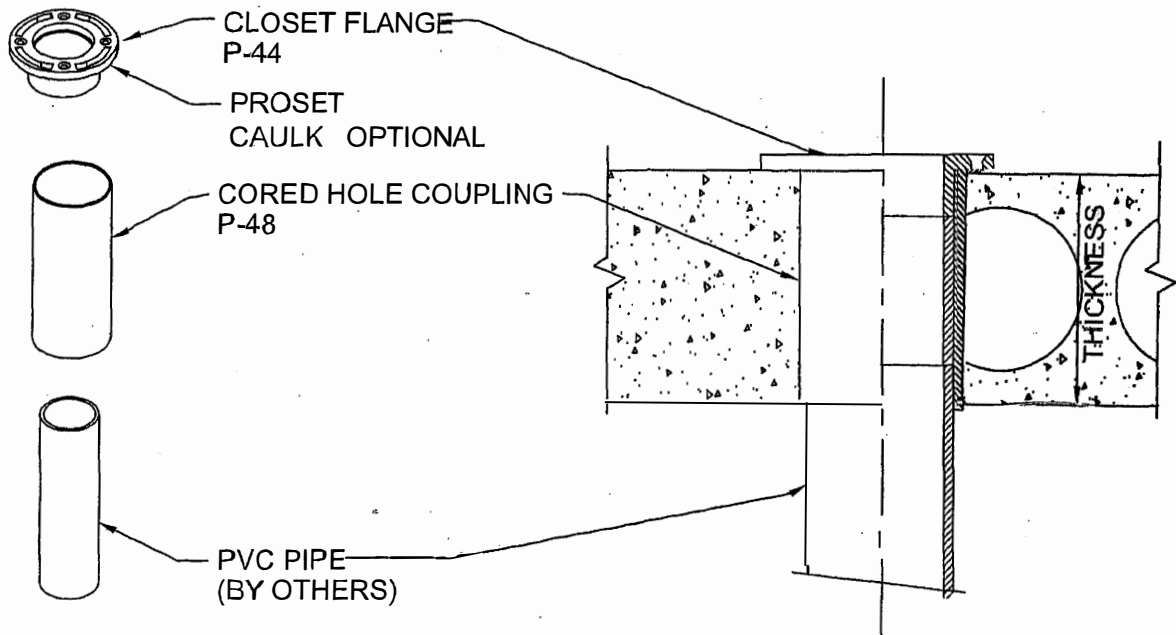

IMPORTANT: PROTECT THE CLOSET FLANGE FROM BREAKAGE DURING CONSTRUCTION.

IMPORTANT NOTES :

1. Core a 4" hole for a 3" closet stub & a 5" hole for a 4" closet stub P-48 coupling.
2. Install a bead of caulk under the closet flange for optional waterproofing.
3. Insert the coupling into the hole from the top side.
4. Insert the P35340 or P45340 closet flange into the cored hole and fasten flange to the concrete.
5. Connect the PVC piping directly into the bottom of the closet stub.
6. Knock-out test cap & set water closet to the closet flange.



W.H. Directory Reference 99 Edition
Firestop Device
W.H. Design No. PS/PH 120-15
F Rating 2 & 3 Hrs.



PROSET[®]
SYSTEMS
FIRESTOP PENETRATOR[™]

DATE :

5-31-21

DRG. NO.

C-4401-D