


# TUB BOX SLEEVE ASSEMBLY

PRECAST CONCRETE OR EXISTING CONCRETE  
FOR FLOORS

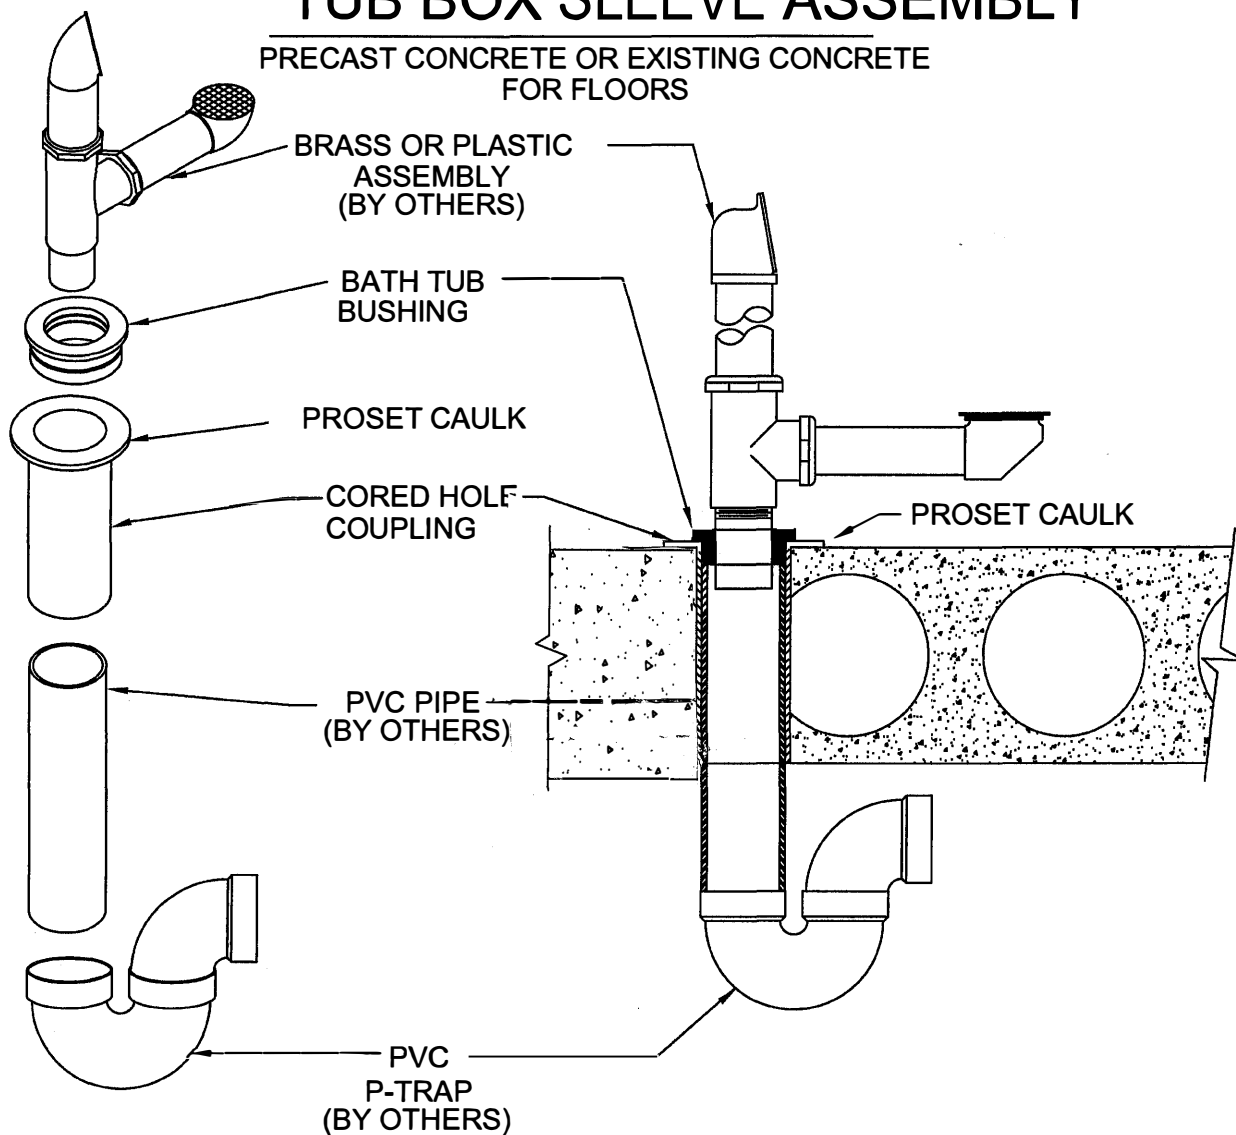

## IMPORTANT NOTES :

1. Core a 2-3/4" cored hole through the concrete - Use a bead of caulk around flange to waterproof.
2. Use above the floor rough tub or chip concrete down to fit waste & overflow.
3. Insert a PVC pipe into the bottom of the Sleeve Coupling and connect to a PVC P-Trap.
4. Use either a C25661 (pipe size) or C25662 (tube size) ProSeal Plug bushing into the Sleeve coupling.
3. Insert the pipe or tube waste and overflow into the ProSeal Plug and connect to bath tub.



W.H. Directory Reference 99 Edition  
Firestop Device  
W.H. Design No. PS/PHV 120-04  
F Rating 2 Hrs.



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :

5-31-21

DRG. NO.

C-6211-D