


# LAV/SINK DROP LEG SLEEVE ASSEMBLY

FOR BOTH CORRUGATED METAL DECK THROUGH CONCRETE FLOORS

NON-VENTED CLOSED END PENETRATIONS  
DO NOT REQUIRE FIRE WRAP

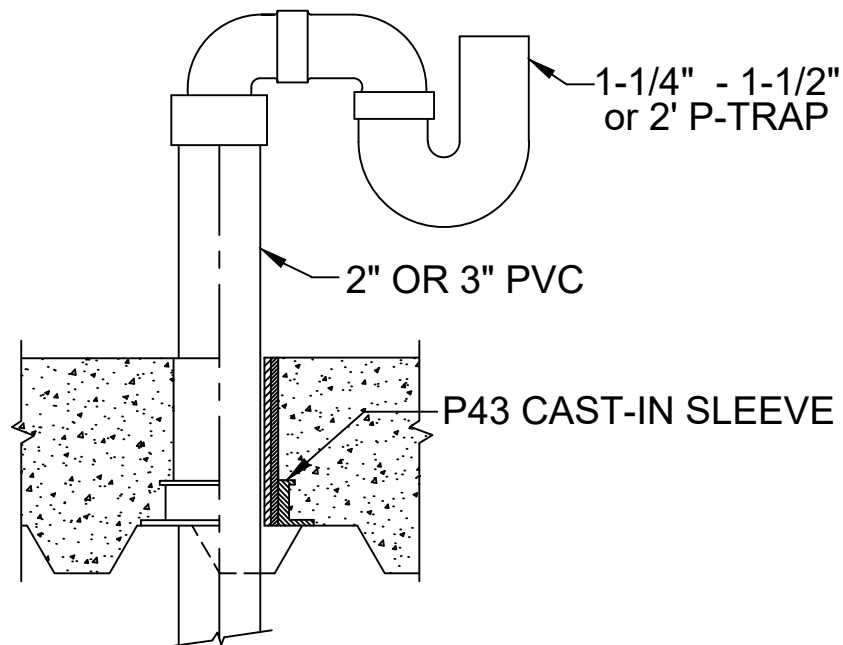

POURED IN PLACE

## IMPORTANT NOTES :

1. Cut a hole in the metal deck. Use screws to mount the sleeve coupling to the metal deck.
2. After concrete is poured, remove protective cap.
3. Use the 2" stub-up for sinks & lavs. The 3" is sometimes used for washing machines drains.
4. 1-1/4" traps can be connected back to back with one 2" vertical drop.
5. Two back to back 1-1/2" sink traps require two separate vertical drops.



W.H. Directory Reference 05 Edition  
Firestop Device  
W.H. Design No. PS/PH 120-08



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :  
05-31-2021  
DRG . NO .  
C-8130-C