# RISER CLAMP DEVICE

## CONCRETE ON WOOD FORM
## FOR FLOORS OR WALLS

COPPER-STEEL
GLASS      OR
CAST-IRON PIPE
(BY OTHERS)

PROSET RISER
CLAMP

COUPLING
P-43

COPPER-STEEL
OR
CAST-IRON PIPE
(BY OTHERS)

TO WATERPROOF
FILL TOP W/
PROSET CAULK

THICKNESS
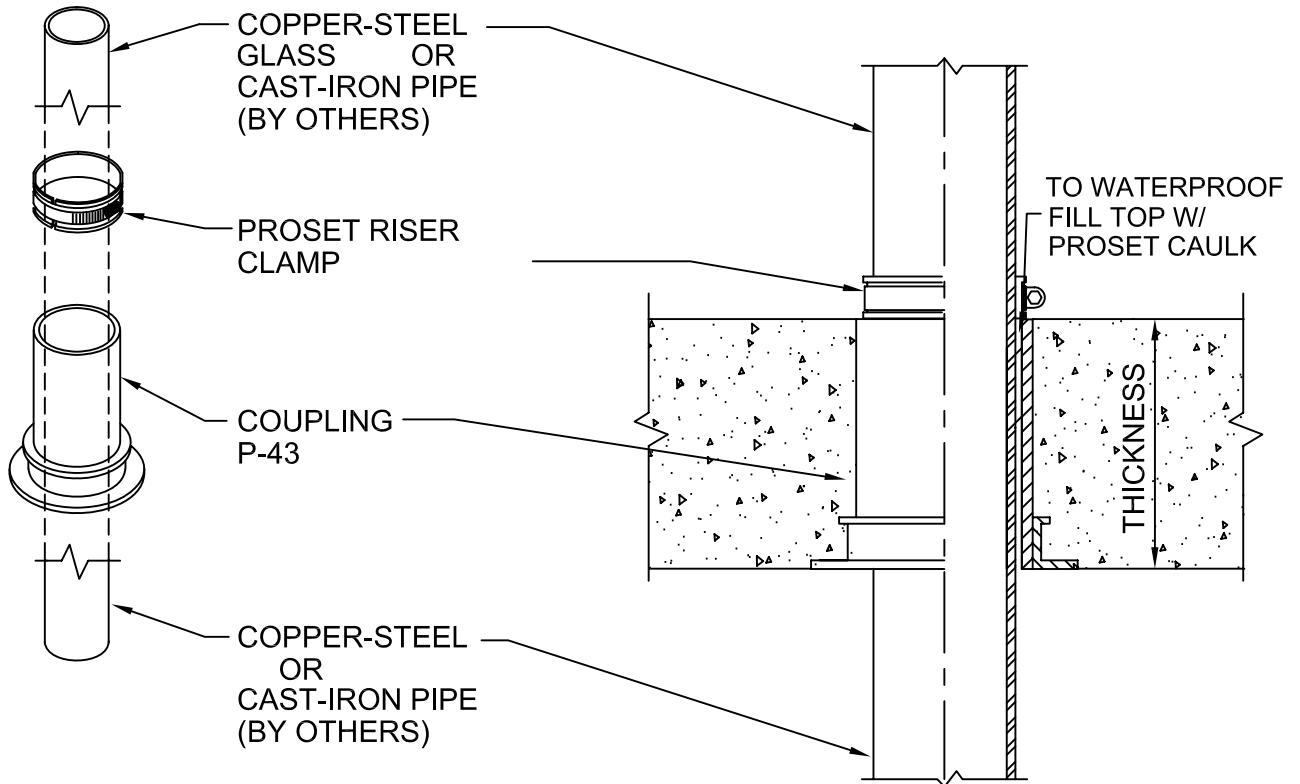
## IMPORTANT NOTES :

1. Use nails through flange holes to mount the coupling to deck.

2. After the concrete pour, remove protective cap.

3. Insert the copper, c.i., glass or steel pipe through the coupling.

4. Fill void at top with ProSet caulking to waterproof.

5. Install riser clamp around pipe to support and draft stop.  Clamp on both sides for walls.

6. When ordering riser clamp-Use suffix CU for copper-CI for cast iron or S for glass & steel pipe.

7. Use Black letter Sleeve Pipe for glass, steel or cast iron-Red letter pipe for copper.